

DESKPOWER™ DB4/DL4 systems



To learn more about LINAK, please visit:

WWW.LINAK.COM

Contents

Preface	4
Safety instructions	5
Before installation, reinstallation or troubleshooting	5
Before start-up	5
During operation	5
Repairs	6
Manufacturer's declaration	6
Misc. on the DESKLINE® DESKPOWER system	7
Warranty	7
Maintenance	7
The DESKLINE® DESKPOWER system	7
Mounting guidelines for the DESKPOWER DB4 system	8
Mounting guidelines for the DESKPOWER DL4 system	10
Mounting guidelines CBD4/CBD5	12
Operation of the DPXX	13
Operation of the DP1C	14
Operation of the DPT	16
Mounting of the DPT	18
Operation of the WDPL	19
Calibrating the WDPL	20
Electrical connection of the DB4/DL4 system	24
Initialisation of the DESKPOWER DB4/DL4 parallel systems	25
Anti-Collision™	26
Disposal of LINAK's products	27
Labels	29
Drawing appendix	30
Addresses	36

Preface

We are delighted that you have chosen a product from LINAK A/S. LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electronic control boxes, controls, and chargers. We are also constantly improving our products to meet customer requirements.

This User Manual will tell you how to install, use, and maintain your LINAK DESKLINE® products.

We are sure that the DESKLINE products will give you many years of problem-free operation. Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your systems, you are always welcome to contact our service departments or service centres.

LINAK subsidiaries and distributors all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products. This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly, and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK systems can affect their operation and durability. Changes must therefore only be made by agreement with LINAK A/S and are made at your own risk.

LINAK A/S

Safety instructions



Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.

Persons who do not have the necessary experience or knowledge of the product/products must not use the product/ products. Besides, persons with reduced physical or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.

Moreover, children must be under surveillance to ensure that they do not play with the product.



It is important for everyone who is to connect, install or use the systems to have the necessary information and access to this User Manual.



If there is visible damage on the product it must not be installed.



The appliance is not intended for use by young children or infirm persons without supervision.



Young children should be supervised to ensure that they do not play with the appliance.

Before installation, reinstallation, or troubleshooting

- Stop the DB4/DL4
- Switch off the power supply and pull out the mains plug.
- Relieve the DB4/DL4 of any loads, which may be released during the work.

Before start-up:

- Make sure that the system has been installed as instructed in this User Manual.
- Make sure that the voltage at the control box is correct before the system is connected to the mains.
- System connection. The individual parts must be connected before the control box is connected to the mains. See the User Manual for LINAK actuators, if necessary.

During operation:

- If the control box makes unusual noises or smells switch off the mains voltage immediately.
- Take care that the cables are not damaged.
- Unplug the mains cable on mobile equipment before it is moved.

Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK workshops or repairers, as special tools must be used and special gaskets must be fitted. Lifting units under warranty must also be returned to authorised LINAK workshops.



Warning!

If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.



Warning!

The DESKLINE® systems do not withstand cutting oil.

Manufacturer's declaration

**Implementation with regard to the Community
legislation on machinery**

Directive 98/37/EC attachment II B:

LINAK A/S, subsidiaries or representatives,
(see back cover)

prohibit that actuators are put into service
until the machinery into which the actuator is to be
incorporated has been declared in conformity with
the provisions of all relevant Directives.

Bent Jensen
LINAK A/S

Misc. on the DESKLINE® DESKPOWER system

Warranty

There is 36 months' warranty on the DESKLINE products DB4, DL4, CBD4, CBD5, DP, DPA, and DPB against manufacturing faults calculated from the production date of the individual products (see label). LINAK A/S' warranty is only valid in so far as the equipment has been used and maintained correctly and has not been tampered with. Furthermore, the system must not be exposed to violent treatment. In the event of this, the warranty will be ineffective/invalid. For further details, please see LINAK A/S ordinary conditions of sale.

Maintenance

Clean dust and dirt on the outside of the system at appropriate intervals and inspect them for damage and breaks.

Inspect the connections, cables, and plugs and check for correct functioning as well as fixing points.



The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).

Description of the DESKLINE® DESKPOWER system

Each DESKLINE® DESKPOWER actuator/column is equipped with a motor and parallel/memory drive is ensured by means of software in the CBD4/CBD5 that also takes account of an oblique load on the desk. Soft start and stop are also part of this software, which ensures a soft start and stop when adjusting the desk.

Application of the DESKLINE® DESKPOWER system:

Irrespective of the load the **duty cycle 10% ~ 6 min./ hour or max. 2 min. at continuous use** stated in the data sheets, must **NOT** be exceeded as this will result in a superheating of the motor and control box. Exceeding the duty cycle will result in a dramatic reduction of the life of the system.

The DESKPOWER system range contains following products:

- 1 control box CBD4/CBD5
- DB4 or DL4 (1 - 4)
- 1 exchangeable mains cable
- motor cables (1 - 4)
- 1 DP1U/DPF1M (if memory function is required) DP1C/WDPL/DPT (if memory function and display is required) or 1 DPA/DPB/DP1K/DP1L/DP1V/DPFK (Desk Panel without memory)

Mounting guidelines for the DESKPOWER DB4 system

For detailed information on how to mount the DB4, please contact LINAK.

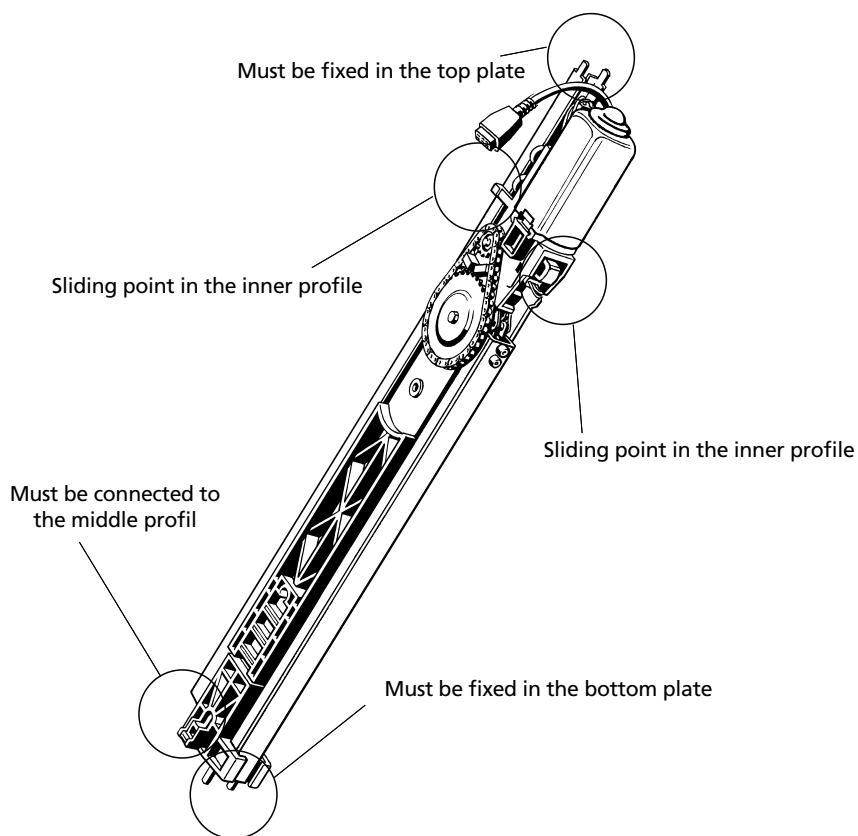


Figure 3
(DB4 fixing points)



The guidances must be secured against rotation.



The DB4 must not be activated when it is not mounted in guidance due to the risk of squeezing.



We recommend to mount the DB4 so that the upper rail is fastened to the side with the highest moment load.

- Side slides must be adapted so that the DB4 is parallel with the profiles and so that there is an easy slide fit between the DB4 and the inner profile
- Bugs must be twisted opposite each other in an angle of approx. 80°
- The friction in the guidance must be max. 150-200 N
- The weight of the top frame + the desktop must be larger than the total friction in the guidances
- Fastening of the DB4 in the middle profile must be strong enough to manage the maximum friction on the middle profile
- Customer guidances must be built into the desk with regard to the conditions described in the DL4 section

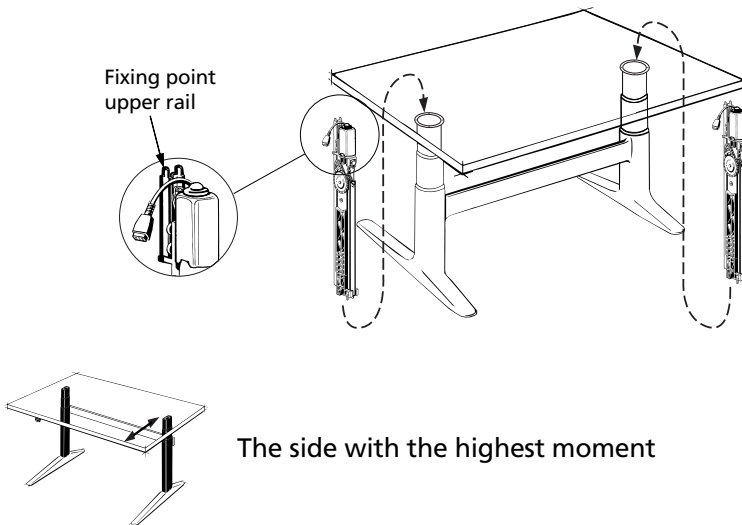


Figure 4
(Example of how to mount the DB4 system)



LINAK recommends that the DESKLINE® DB4 system should be used in push applications.



Placement of a monitor directly above the columns may cause malfunction of the monitor. Magnets inside the motor may interrupt the picture on the monitor depending on the distance and type of monitor.

Mounting guidelines for the DESKPOWER DL4 system

The mounting bracket for the crossbar is mounted on the largest profile. The cable is led out at the top of the small profile. This means that the column must always be mounted with the largest profile downwards.

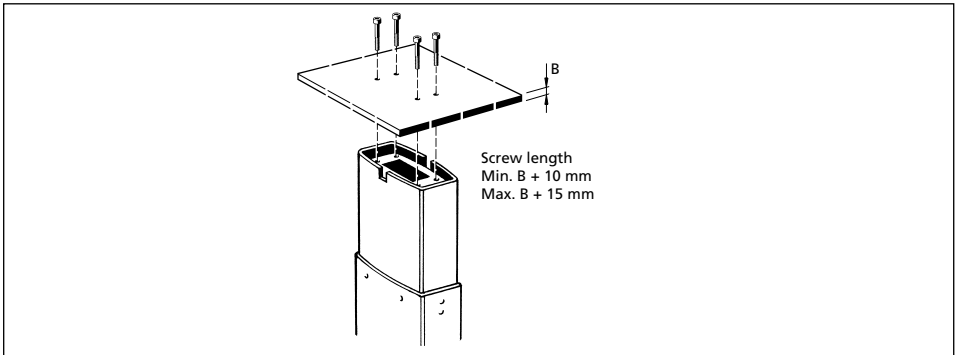


Figure 1



The mounting of the bottom part is analogue to the top part shown in Figure 1.

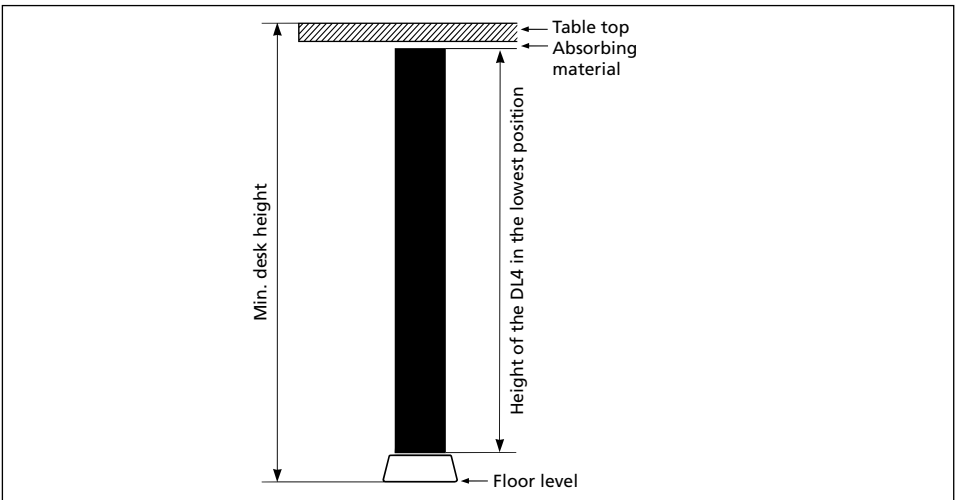


Figure 2

A suitable desk height in the lowest position can be obtained by mounting the lifting unit on a 6-8 mm bottom plate by means of 4 pcs. of M6 countersunk screws. We recommend you to use screws of min. quality 8.8. The thrust moment must not exceed 10 Nm in the top and bottom plate thread.

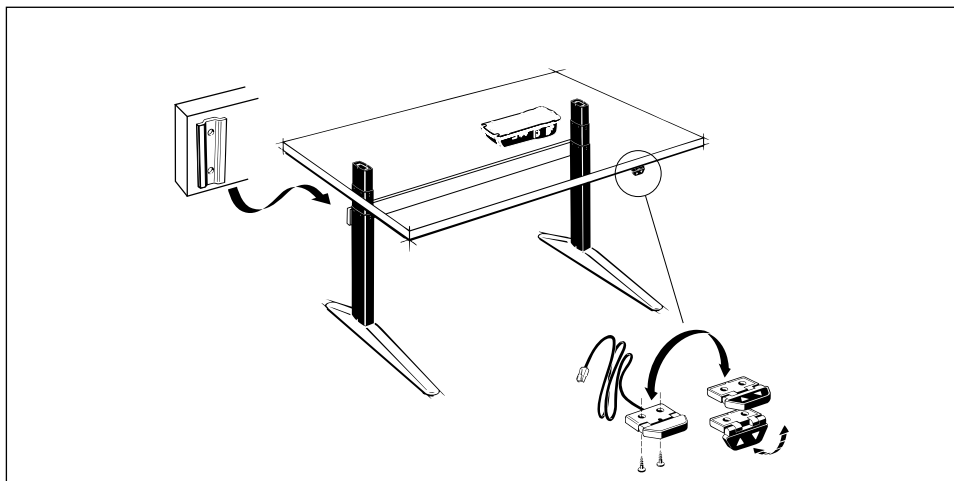


Figure 3

(Example of how to mount a 2 parallel DESKLINE® DESKPOWER DB4/DL4 system)



LINAK recommends that the DESKLINE® DESKPOWER DL4 system should be used in push applications.



Placement of a monitor directly above the motor may cause malfunction of the monitor. Magnets inside the motor may interrupt the picture on the monitor depending on the distance and type of monitor.

If this is the case the problem may be solved by placing an iron plate/tube or another magnetic material, somewhat larger than the profile between the motor and the tabletop.



The mounting screws on the DP, DPA, or DPB must be fastened with a max. torque of 1 Nm.



The DL4 is mounted with a conical dovetail bracket (female). On the crossbar the counterpart of this bracket must be mounted (male). This bracket can be ordered at LINAK.

When mounting the bracket onto the crossbar you must be careful to mount the brackets perpendicular to the crossbar and that the centre distance of the bracket fits exactly with the centre distance of the legs in the top frame bore of the desk (oblong holes in the top frame give adjustable centre distance).

When the crossbar is mounted onto the legs it must be tightly fixed with a plastic hammer to obtain the maximum stability.


The bracket has to be fully welded in both ends not through the holes in the bracket (the bracket will bend). Do not mount extra brackets in a way that deforms the profiles.



When designing the desk/top frame and placing the control box you have to choose a design/a placement that ensures there is no risk of squeezing at the crossbar.

Mounting guidelines CBD4/CBD5

The control box is to be fastened with 4 screws (3 screws for CBD5) with a head diameter between $\varnothing 8$ and $\varnothing 10$ mm. Out of regard for the tension surface $\varnothing 10$ mm is preferable. See drawing appendix for placing of mounting holes and the space the CBD takes up.

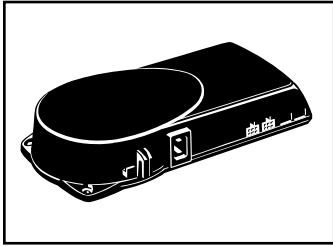

CBD4 - Control box



CBD5 - Control box

The CBD must not be packed in heat insulating material, but must be placed so that it can emit waste heat into the surroundings. There are no ventilation holes to consider, the CBD emits heat through the surface.







The plug must be visible when the CBD is mounted so that the supply to the CBD can be disconnected at replacement, if any.

The mounting screws on the control box must be fastened with a max. torque of 1 Nm.

The mounting surface to which the control box is attached should have a surface evenness of better than ± 0.5 mm.

Operation of the DP

The Desk Panel is used to operate the DESKLINE® system. The DP is available in a number of versions DPA/DPB/DP1K/DP1L/DP1U/DP1V/DPF1K for single/parallel drive without memory and DP1U/DPF1M for single/parallel drive with memory (3 memory positions). The two arrow buttons are used for single/ parallel drive and the last four buttons for memory drive.

-  Desk up
-  Desk down
-  Memory 1
-  Memory 2
-  Memory 3
-  Store memory



Single/parallel drive


The arrow buttons start the DL4/DB4. The function is only activated when holding down the button.

Memory drive


Memory 1, 2, and 3 start a memory drive, the channel(s) drive to a preprogrammed position.

Store memory


- Push 
- Within two sec. push either  ,  , or 

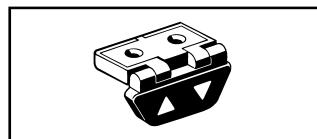


DPA - Desk Panel

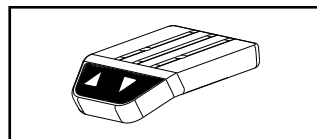


DPB - Desk Panel

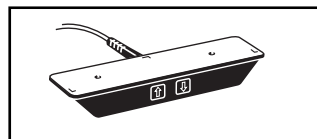


DP1K - Desk Panel

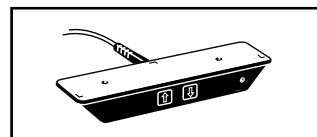

DP1L - Desk Panel

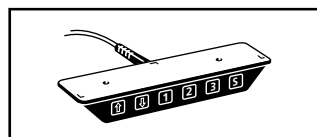

DP1U - Desk Panel

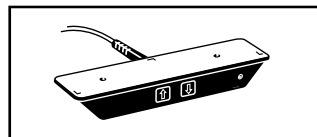

DP1V - Desk Panel



DPF1K - Desk Panel









DPF1M - Desk Panel

Operation of the DP1C

The DP1C cannot be used on the CBD4 with mains cut-off.

Description

The DP1C is equipped with a display and memory and is compatible with the CBD4 (Advanced, software 077402 ver. 1.66 or later). The DP1 is only available as a 1-channel version for operation of the parallel channels up and down. The actual height of the desk is shown in the display. The display is of the LED type with a yellow light and 10 mm high digits.

-  Desk up
-  Desk down
-  Store memory
-  Memory 1
-  Memory 2
-  Memory 3



Normal operation:

To run the desk up or down, press the UP or DOWN button, and keep it pressed until the desk reaches the desired height. The display will count up or down while running, and after stop it will continually show the current height of the desk.

Changing between cm and inches:

Keep the S button pressed for approx. 4 sec. and the reading will change from the current setting. The default setting depends on the type chosen.

Store a memory position:

When pressing the "store" button the display will flash "S" for 3 sec. Within the 3 sec. press memory button 1, 2 or 3. The display will acknowledge by showing S1, S2, or S3 for 1 sec. To abort a store sequence press the UP or DOWN button while the "S" is flashing, or wait the 3 sec. until the display automatically returns to show the height of the desk.

Drive to a stored position:

Version with "GO-memory"

Press memory button 1, 2, or 3. The display will flash "GO1", "GO2" or "GO3" for 3 sec. Within the 3 sec. press the UP or DOWN button and keep it pressed until the desk stops in the stored position. Both the Up and the Down button will activate memory drive. Although e.g. the memory position is higher than the actual height, it will drive upwards when you press the Down button. While running to a memory position the display will show GO1, GO2 or GO3, and when it stops in the stored position, the height of the desk will be shown. Releasing the UP or DOWN button will abort the memory drive. The display will show the height of the desk.

Version with "standard memory"

Press memory button 1, 2, or 3 and the system will start driving to the wanted

memory position. Keep the button pressed until the position is reached. The display will show the actual height during the memory run.

Adjust the display to show the correct height:

It may be necessary to adjust the display due to different thicknesses of desktops etc, when the DP is delivered from the factory. The DP will show 68 cm or 24.5 inches (default setting) height of the desk. At the same time press the "Store" button and step UP or DOWN, until the display shows the correct height.

Adjusting the light intensity of the LED display

Possible light settings are: 0= off, 25 = 25%, 50 = 50%, 75 = 75%, 100 = 100%.

Adjustment procedure

Press the "1" button and at the same time either "desk up" or "desk down" this will adjust the light intensity. Initial press will show the current setting. Keep the "1" button pressed during the whole sequence while adjusting up or down. Keep a button pressed for more than 800 msec then the button will auto repeat every 100 msec. Releasing all buttons stores the new setting.

Adjusting the light timeout

Possible light timeouts are: 0-15 sec and off

Adjustment procedure

Press the "3" button and at the same time either "desk up" or "desk down" this will adjust the light timeout. Initial press will show the current setting. Keep the "3" button pressed during the whole sequence while adjusting up or down. Keep a button pressed for more than 800 msec then the button will auto repeat every 100 msec. Releasing all buttons stores the new setting.

Errors

Below please find the possible errors which can be displayed. The errors will only be displayed when a button is pressed. The display blinks while showing the error. E16 overrules any other error as the detection is registered only in the display and no message is sent to the control box.

Diagnostic errors

The CBD4 (version 1.86 or later) can send up to 6 different diagnostic error codes at the same time. The diagnostic error codes will overrule error states (except E16). Diagnostic errors will only appear as long as the button is pressed. The display will blink EXX and will toggle through the diagnostic errors and send them to the LINBUS in the CBD. For detailed error description and codes please see the appropriate CBD software description.

(Only working with the DP1C from production date 1 february 2006 and onward)

Error no.	Description
E01	The desk has an unknown position and needs to be initialised.
E02	Overload upwards has occurred.
E03	Overload downwards has occurred.
E16	Illegal keys pressed.







Operation of the DPT



For safety reasons the DPT has a locking function.

If the DPT is locked, only a bar is lighting in the display. To unlock the control press "S" for 1 sec. When the DPT is unlocked, the height will be shown in the display. Now the DPT is active for 2.5 seconds. When pressing one of the keys you can do your adjustment. Hereafter the DPT will be active for 5 seconds but when there are no activations made within the mentioned time slot, the DPT will go in to locking mode again. Also if you press "S" for unlocking too long, the DPT will unlock but immediately lock again.

The Touch Desk Panel is used to operate the DESKLINE® systems. The DPT is divided into parallel and memory drive. The two arrow buttons are used for parallel drive and the last four buttons for memory drive.

-  Desk up
-  Desk down
-  Store memory
-  Memory 1
-  Memory 2
-  Memory 3



Normal operation:

To run the desk up or down, press the \wedge or \vee button, and keep it pressed until the desk reaches the desired height. The display will count the height as the table is moving and will continually show the height of the desk after stopping.

Storing a memory position:

Touch the "S" button the display will flash "S" for 3 sec. While the "S" is displayed, touch the memory button 1, 2 or 3. The display will acknowledge by showing S1, S2 or S3 for 1 sec.

To abort a store sequence press the \wedge or \vee button while the "S" is flashing, or wait the 3 seconds until the display automatically returns to show the height of the desk.

Drive to a stored position:

Press memory button 1, 2 or 3 and the system will start driving to the desired memory position. Keep the button activated until the position is reached. The display will count the height as it is driving to the memory position.

Customizing the DPT digital display

Adjust the display to show the correct height:

The DPT will show 68 cm or 24.5 inches as the height of the desk as the default setting. It may be necessary to adjust the displayed height due to different thicknesses of desktops etc. when the DPT is delivered from the factory. To adjust the display touch the "S" button and the \wedge or \vee button at the same time until the display shows the actual height of the desk.

Changing between cm and inches:

Touch the "S" button for approximately 4 seconds and the unit of measurement will change on the display. The default setting depends on the type chosen.

Error Codes

The DPT has capability of displaying error codes for diagnostic feedback. Below are possible feedback errors which can be displayed by the DPT. The error codes will only be displayed when a button is touched in unlocked mode. The display will blink while showing the error. E16 overrules any other error since the detection is registered only in the display and no message is sent to the control box. For detailed error description and codes please see the appropriate CBD software description.

Error no.	Description
E01	The desk has an unknown position and needs to be initialised.
E02	Overload in upwards direction has occurred.
E03	Overload in downwards direction has occurred.
E16	Illegal keys are pressed.

Mounting of the DP1T:


The hole in the table top has to be made according to the drawing. The DPT is mounted in the hole and the two screws on the back side are fastened with a maximum torque of 40Ncm. If you do not have a torque screw driver please tighten gently and not more until you can feel a slight resistance. Do not use electrical tool!!

Please note:




1. Mounting the DPT into the table top should be done at the end user, so the product won't be exposed to any stress which can destroy the product, when transported.
2. For countersink versions the technician must ensure that the acrylic plate is not put under pressure which will push the acrylic plate out of place.
3. The screws which are delivered with the product must be used. If they have gone lost there shouldn't be chosen new screws which are longer than 12 mm, otherwise top and bottom will disconnect.
4. If the product has visible damages it shouldn't be mounted.
5. The product is IP30; the customers can be sure that fluids / dust will not enter the product. The front it selves is closed by the acrylic plates adhesive foil.
6. Cable release is specified for max. 5 kg
7. Remember to remove the protection foil.

Frame:

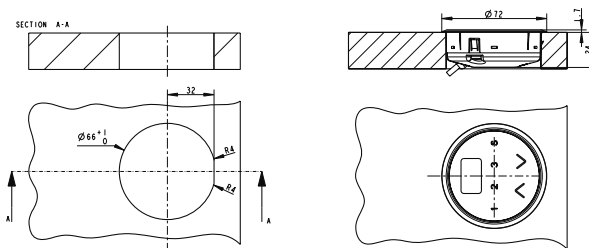

Countersink:

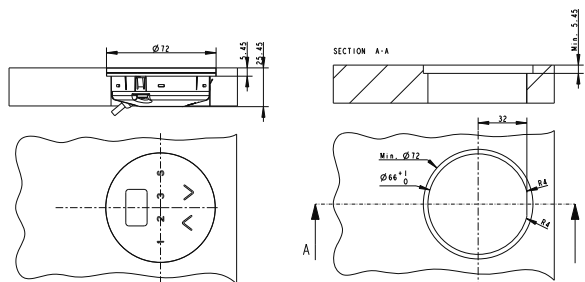

Operation of the WDPL

The batteries:

Wired WDPL: Install 3 x 1.5 V batteries type AA. The batteries are used as a backup of the clock function if the CBD is disconnected from the mains.

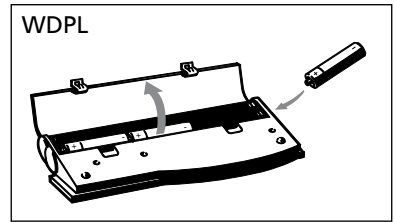


Figure 9

When the batteries are mounted the display will show the clock function in hh:mm. The clock has to be adjusted. **See adjusting the clock on page 21.**

Low battery:

Change batteries at weak contrast in the display or when the display shows strange symbols/misinformation.

This does not influence the function of the WDPL - it is exclusively a sign that the batteries are to be replaced.

The WDPL will also work without batteries because it will be powered by the control box.

The WDPL will also work on a CBD4/CBD5 with mains cutoff. The clock will only be shown if you have battery backup.

The cable from the WDPL is connected to the control box under your table:

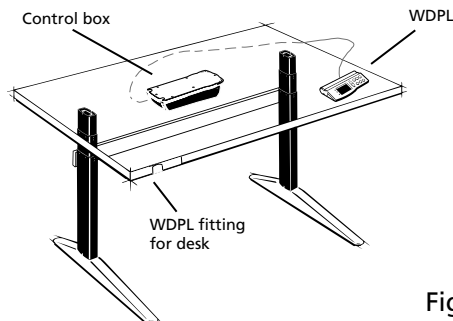
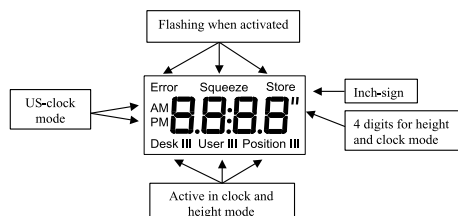





















Figure 11

Display layout - WDPL:



Calibrating the WDPL

For the WDPL to function correctly you have to calibrate your system. This has to be done before using the WDPL. You only have to do this once.













Action:	Display view:
<p>1. Switch between [cm] and [inch]. Press and hold  and then press .</p>	 
<p>2. Measure the height from desk to floor. If only one desk is connected, - go to point 4.</p>	
<p>3. Press  and then press ,  or  to select desk. If only one desk is connected it is not possible to select Desk II or III.</p>	
<p>4. Press and hold  and then press  or  to adjust the height in the display. Example: The display will switch from e.g. 68 to 69, 70, 71 etc. when  is pressed and held and then  is pressed. and e.g. 68 to 67, 66 etc. when  is pressed and held and then  is pressed.</p>	
<p>5. When the wanted height is shown in the display press and hold  and then . The reference height of the desk will now be stored in the control box. When the reference height is stored the digits will be switched off for 1 sec. and back on again.</p>	

If the buttons are not activated for 15 sec. the clock function will appear in the display.

It is not necessary to repeat calibration when changing batteries.

Adjusting the clock

Example:

Action:	Display view:
<p>1. Press the "clock button" using a ball pen. 24hr mode (European time mode) is default - can be changed to 12hr mode (US time mode)</p> <p>Changing time mode:</p> <p>Press  or </p> <p>(Press the "clock button" again to confirm "time mode" using a ball pen)</p> <p>2. Press  or  to adjust "hh"</p> <p>3. Press the "clock button" again to confirm "hh".</p> <p>4. Press  or  to adjust "mm"</p> <p>5. Press the clock button again to confirm "mm"</p>	<div><p>Flashing</p></div> <div><p>Flashing</p></div> <div><p>hh is flashing</p></div> <div><p>Switches to PM if hh > 11</p></div> <div><p>mm is flashing</p></div> <div></div>

The clock is now activated.

Store a memory position

3 users can store 3 memory positions each. The connected desks (max. 3) are to be adjusted individually - one at a time.

Quick setup:

On the back of the WDPL you will find a quick guide for storing a memory position.

Example:

Action:	Display view:
<p>If only one desk is connected, - go to point 4.</p> <p>1. Press </p> <p>2. Press , or until the wanted desk is shown in the display.</p> <p>3. Press </p> <p>4. Press , or until the wanted user is shown in the display</p> <p>5. Press or until the wanted height is obtained.</p> <p>6. Press and then , or </p>	

The position is now stored in the control box.

To store a new memory position on the same desk go through points 3 to 6 again.










If the buttons are not activated for 15 sec. the clock function will appear in the display.

Switch to a stored memory position

Quick setup:

On the back of the WDPL you will find a quick guide for storing a memory position.

Example:

Action:	Display view:
<div>1. Press </div> <div>2. Press  ,  or  until the wanted user is shown in the display</div> <div>3. Press and hold  ,  or  until all desks have reached their memory position.</div> <div>The display will show the height of the moving desk for about 15. sec.</div>	<div> Flashing</div> <div> Position I is flashing - digits counting from 117 to 88. When the desk has reached the new height position I it will stop flashing.</div>

If the buttons are not activated for 15 sec. the clock function will appear in the display.

Troubleshooting:

At errors the error code appears from the display - The “error” segment flashes (1 Hz).

Error code	Description of the error	Trouble shooting
E-01	Position lost	Initialize
E-02	Overload in upward direction	Remove heavy objects from the desk
E-03	Overload in downward direction	Remove objects that prevents downwards operation
E-16	Illegal push on key	Release all buttons and activate valid button / button combination

Electrical connection of the DB4/DL4 system:

The DESKPOWER system is to be connected as shown on figure 7. Each DB4/DL4 is to be connected to the sockets on the control box by means of the motor cables, which have an 6-pin plug in each end.



Finally the mains cable is to be mounted and power switched on.

Please note that the control box must only be connected to the voltage stated on the label.

CBD4/CBD5 with earth

The CBD4/CBD5 earth cable to be mounted on the desk construction (typically the top frame) in a way that ensures good electrical contact. The function of the earth cable is to earth the desk and ground static electricity. The earth connection does not protect other electrical products.



CBD4/CBD5 with mains cutoff

If the power cable is damaged it has to be replaced by an authorised LINAK service centre to avoid any danger.

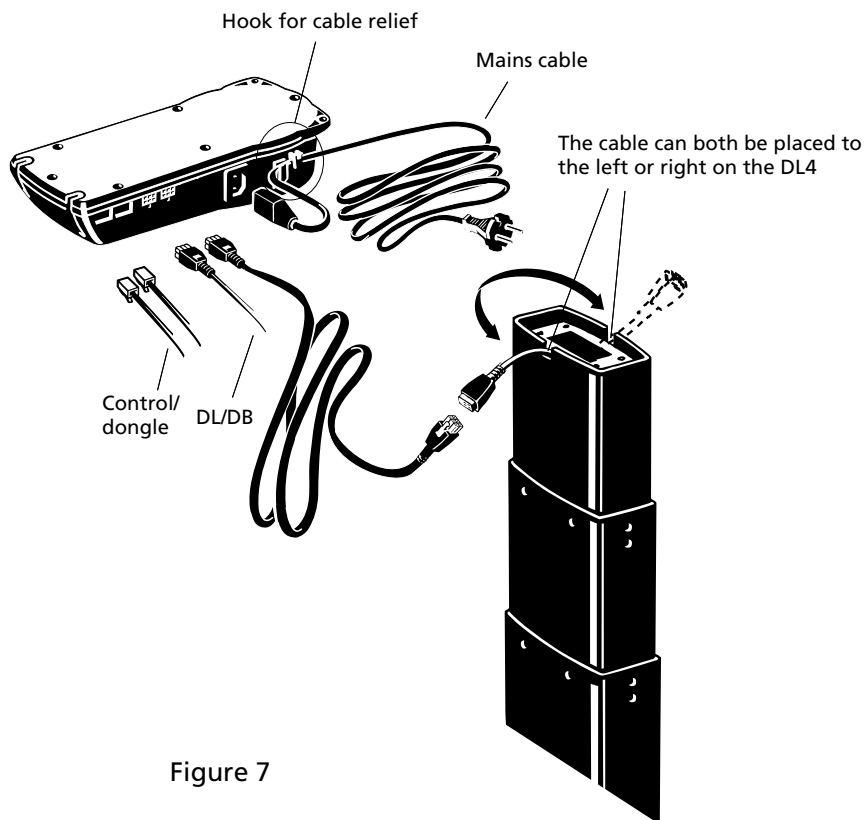


Figure 7

Initialisation of the DESKLINE DB4/DL4 parallel systems


The DESKPOWER system is initialised by pressing the down button once or twice and holding it down until the DB4/DL4 runs into end stop. It will then automatically run approx. 5 mm out again and hereafter slowly run in again. Only release the down button when the movement has completely stopped.



If the button is released before the sequence is complete then the initialisation is interrupted and must be started again from the beginning.

It is sometimes necessary to press the down button twice to start the initialisation, this is because the system can be in different modes when the initialisation starts. There will be a 1.25 sec. delay. If an error situation occurs at the end stop positions or DB4/DL4 are changed to another stroke length, then CBD4/CBD5 has to be initialised again.

The first two times the system runs into the outward end stop, it will automatically run approx. 3 mm back in inward direction.

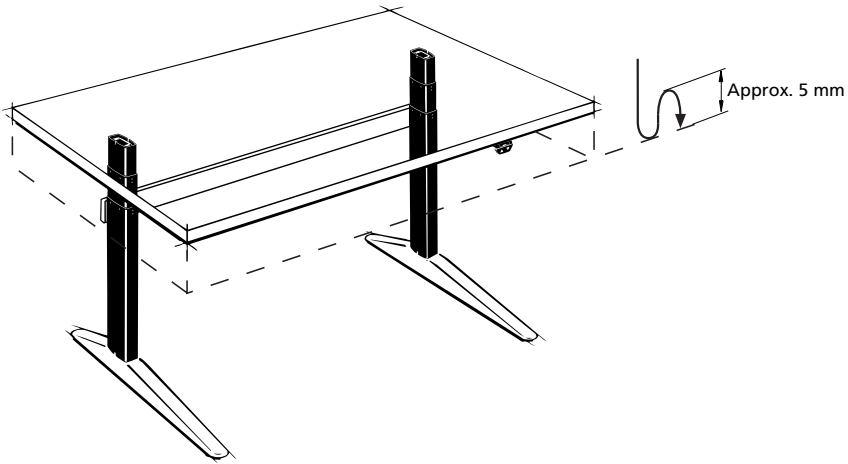

The CBD5 can control the DB4 and the DL4 in 2 parallel and 3 parallel while the CBD4 can control the DB4 and the DL4 in 2, 3, and 4 parallel so that the desk is always kept horizontal.

Anti-Collision™ (only for DL4, DL6, DL9, and DL11)

The function anti-collision is a new option for the standard CBD4/CBD5 advanced/ control box software version 1.66 and later. A system with anti-collision can limit material damages on a desk if a collision with a solid object should occur.

Enabling the anti-collision

To enable the anti-collision function a little plug called a dongle must be mounted in one of the 2 control ports. The function is only active when the dongle is mounted. –If you remove the dongle again you disable the function.

Method of operation

When the DL/DB's are running the CBD4/CBD5 monitors the current consumption on each channel using a special algorithm. If the current consumption on one channel is increased more than a predefined slope a collision is assumed and all channels are stopped immediately and all DL/DB's will start to run in the opposite direction (approx. 50 mm). This return drive is done automatically and continues with or without any control key pressed (for max. 2.5 sec.).

The anti-collision sensitivity is different in up and downward direction. Upwards the force is approx. 20 kg. Downwards the load will be approx. 40 kg + the load on the DL/DB (the desk + what is on top of the desk). The 40 kg are needed to activate the anti-collision function.

Situations where the anti-collision does not work

There are situations where the anti-collision will not be activated. These situations are:

- If the collision happens during the initialisation phase
- If the collision happens within the first 1000 msec or after the control button has been released
- If the collision happens between the floor and the table and the load on the desk + the weight of the legs are lower than 40 kg
- If the collision happens over too long time, e.g. if the collision is with a soft object

Disposal of LINAK's products

As LINAK's customers often ask us how our products can be disposed of or scrapped we have prepared this guidance that enables a classification to different waste fractions for recycling or combustion.

Guidance

We recommend that our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible material, and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Columns/ Actuator :	Spindle and motor Plastic housing Cable PCB boards	Scrap Plastic recycling or combustion Cable scrap or combustion Electronics scrap
Control Box :	PCB boards Plastic housing Cable Transformer	Electronics scrap Plastic recycling or combustion Cable scrap or combustion Metal scrap
Handset/ Control :	Plastic housing Cable PCB board	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now almost all our casted plastic parts are supplied with an interior code for plastic type and fibre contents, if any.

Main groups of disposal

Product main groups	Metal Scrap	Cable scrap	Electronics scrap	Plastic recycling or combustin	Comments
DB4	X	X	X	X	
DL4	X	X	X	X	
CBD4/CBD5	X	X	X	X	
DPXX		X	X	X	
WDPL		X	X	X	

Disposal of batteries.

"Details regarding safe disposal of used and leaking batteries:

Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the environment.

How to deal with leaking batteries.


Leaking batteries should be disposed as described above.

If leaking batteries are discovered in the product the batteries must be removed at once to minimise damage to the product. If leaking batteries are left in the product it might become defect.

It is recommended to use plastic gloves when handling leaking batteries. The contents of a leaking batteries can cause chemical burns and respiratory irritation.

If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention."


Label for CBD4

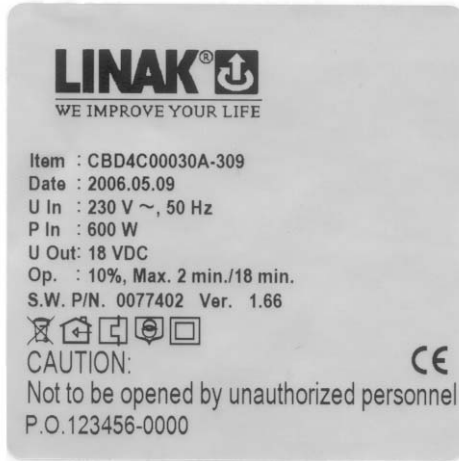


Label for CBD5



Label for DL4

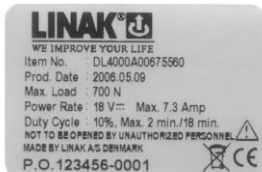


Label for WDPL

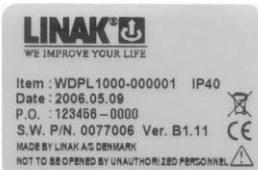


Label for DB4




Label for DP

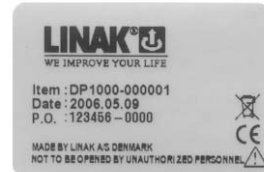

Label for DPA

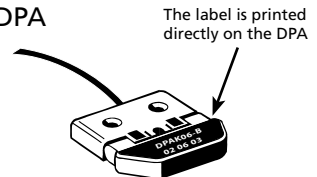

Label for DPB

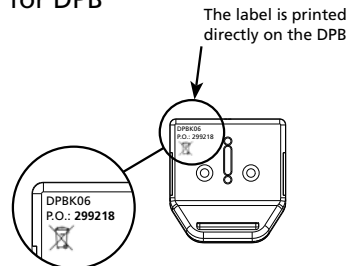

Label for DPF




Label for DPT




DRAWING APPENDIX

DESKLINE® DESKPOWER DB4/DL4 System:


DL4

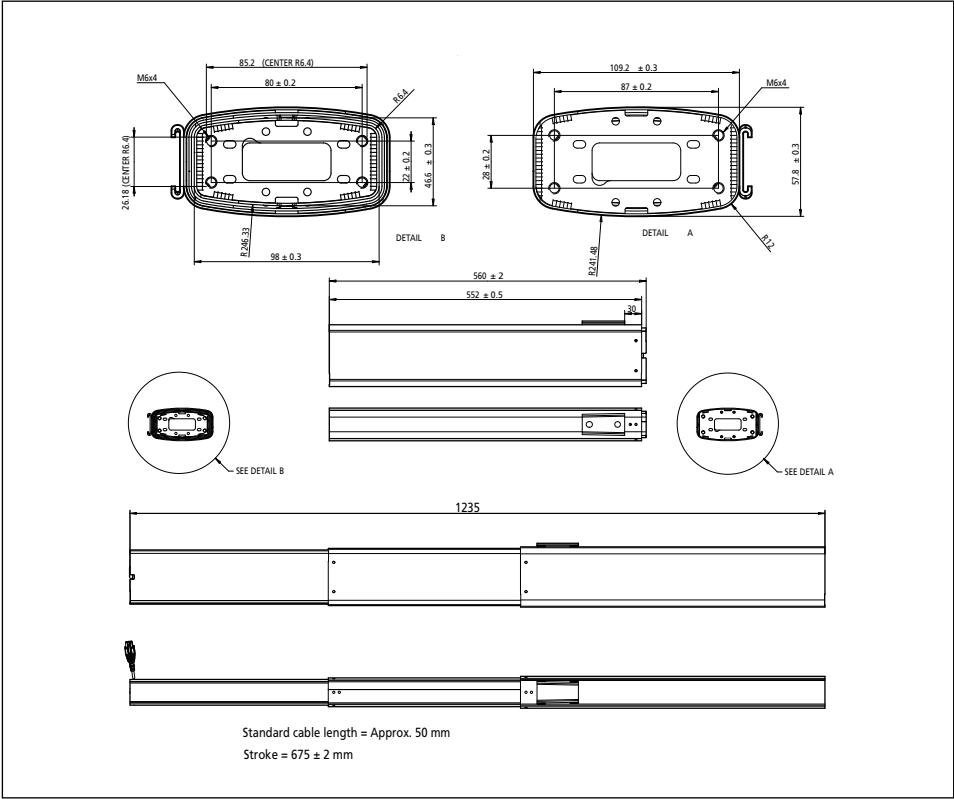


DB4

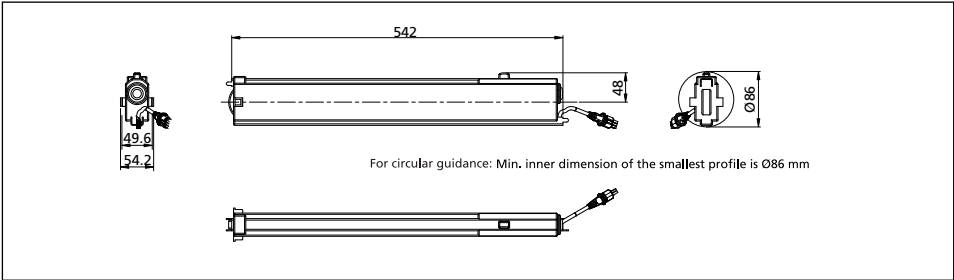


DPA

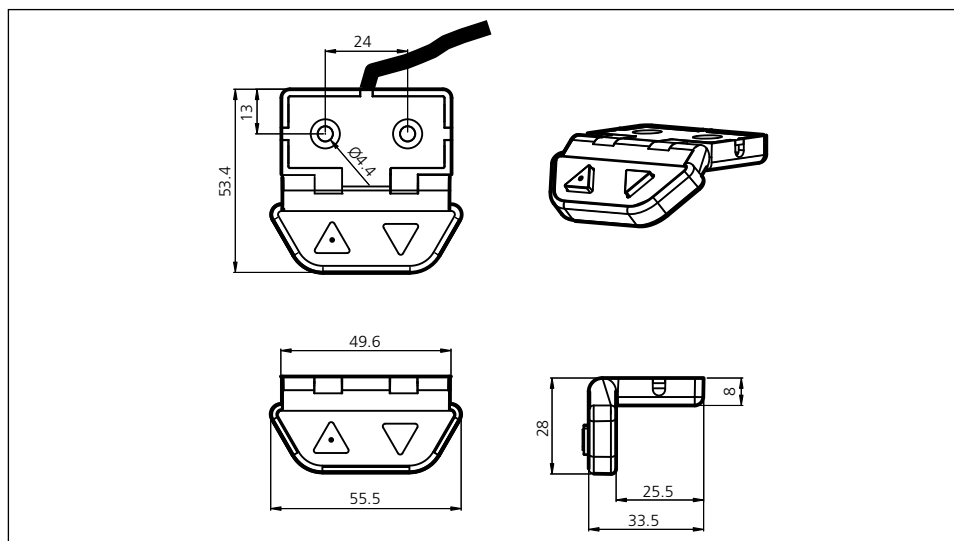


DPB

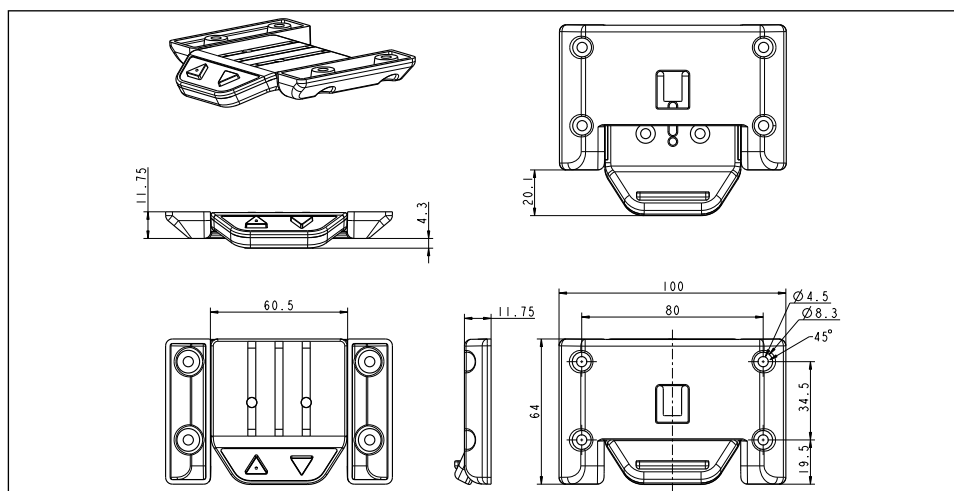


DP Desk Panel

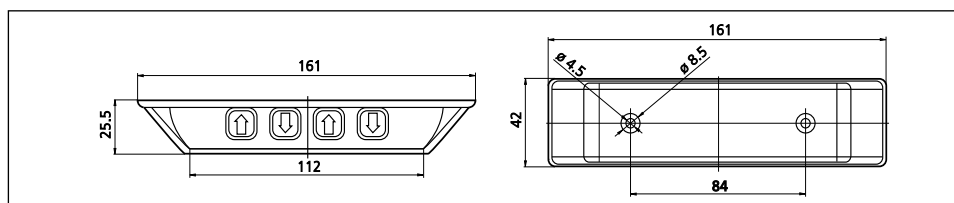


DP1C Desk Panel

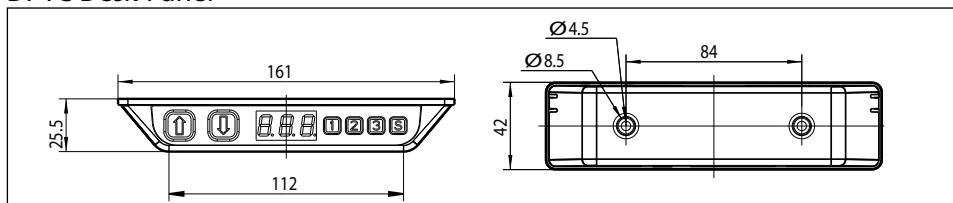


DP1U Desk Panel

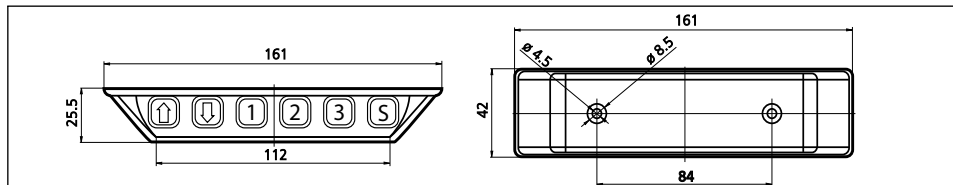


DPF1K Desk Panel

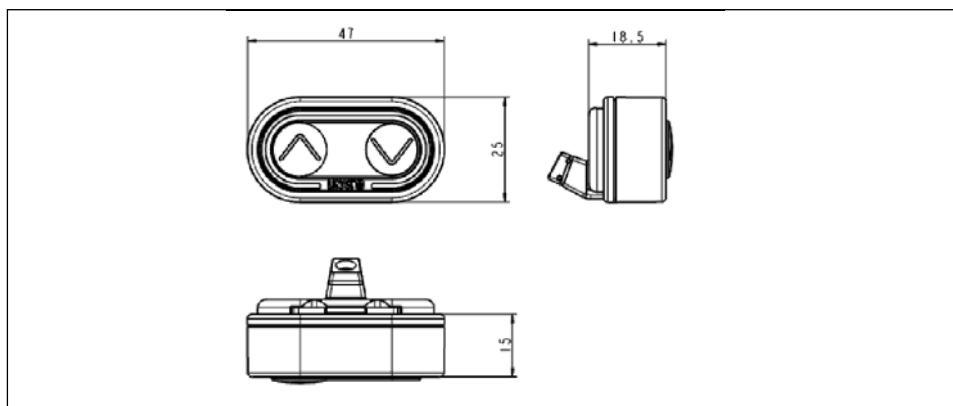


DPF1M Desk Panel

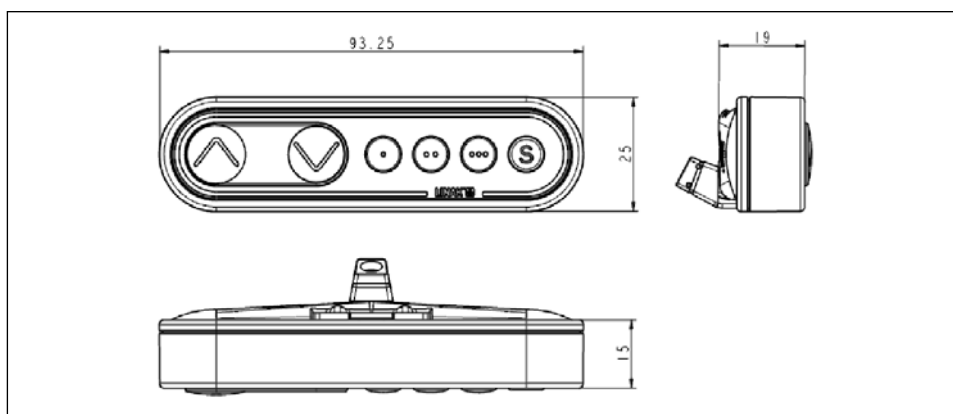


DPT Desk Panel

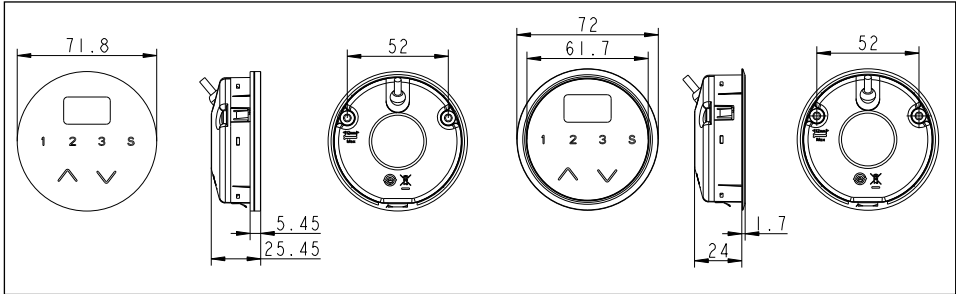


WDPL

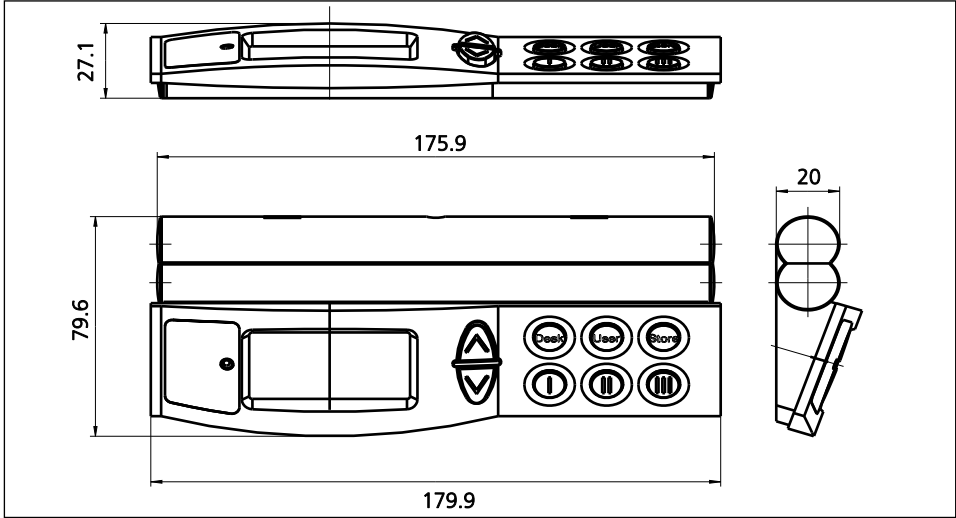


WDPL fitting for desk:

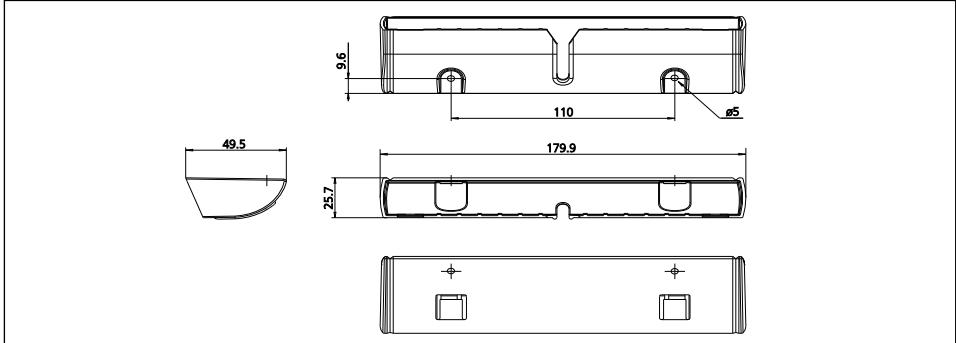

CBD4

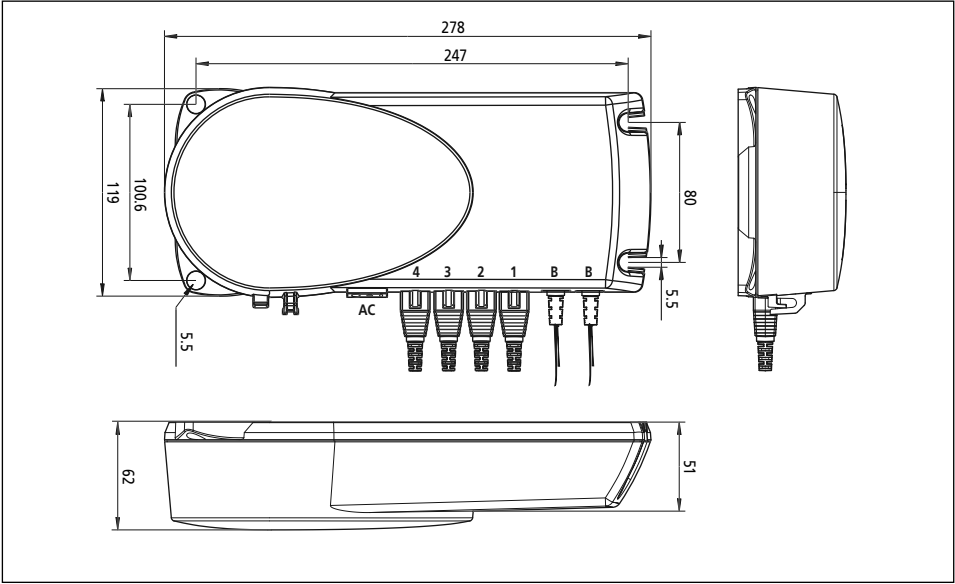

CBD5

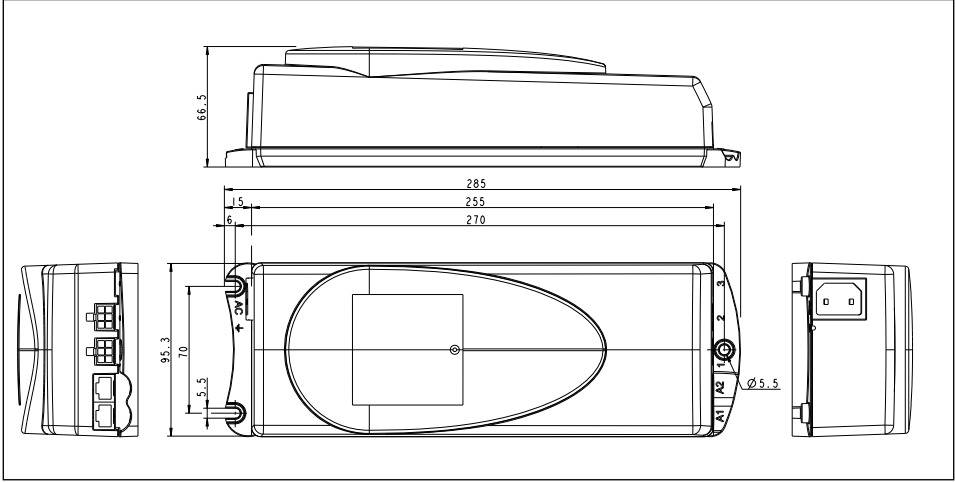

DECLARATION OF CONFORMITY

LINAK A/S
Smødevænget 8
DK - 5430 Nordborg

hereby declares that LINAK Actuator System composed of:

Control Box(s) CBD4, CBD5

And

Linear Actuator(s) 31xxxH-xxxxx50S, DB4, DE5, DB6, DB7, DB9 and / or

Lifting Column(s) DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11

And

Desk Panel(s) DP1C, DP1K, DP1T, DPB, DPF, DPBK, DP1L, DP1V, DPAK, DPH1K, WDPL1,

complies with the EMC Directive: 2004/108/EC according to following standards:
EN 61000-4-2:1995+A1+A2, EN 61000-4-3:2006, EN 61000-4-4:2004,
EN 55022:1998+A2 Class B,

and complies with Low Voltage Directive 2006/95/EC according to the standard:
EN 60335-1:2002+A1+A11+A12+A2 (Household and similar electrical appliances - Safety - Part 1: General requirements)

Additional information:

The system does also comply with the standards

DS/EN 61000-6-1:2002 (Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments)

DS/EN 61000-6-3:2002 (Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments)

Date: 2009-04-03

Signature:



(John Kling)

LINAK APPLICATION POLICY

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or new customer application.

LINAK products as defined above are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that the LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

FACTORIES

CHINA

LINAK (Shenzhen) Actuator Systems, Ltd.
Phone: +86 755 8610 6656 · Fax: +86 755 8610 6990
E-mail: sales@linak.cn · www.linak.cn

DENMARK

LINAK A/S · Group Headquarters Guderup
Phone: +45 73 15 15 15 · Fax: +45 74 45 80 48
Fax (Sales): +45 73 15 16 13
E-mail: info@linak.com · www.linak.com

SLOVAKIA

LINAK Slovakia s.r.o.
Phone: +421 517563 414 · Fax: +421 517563 410
E-mail: jp@linak.sk · www.linak.com

USA

LINAK U.S. Inc.
North and South American Headquarters
Phone: +1 502 253 5595 · Fax: +1 502 253 5596
E-mail: info@linak-us.com · www.linak-us.com

SUBSIDIARIES

AUSTRALIA

LINAK Australia Pty. Ltd.
Phone: +61 3 8796 9777 · Fax: +61 3 8796 9778
E-mail: sales@linak.com.au · www.linak.com.au

AUSTRIA

LINAK GmbH
Phone: +43 2746 21036 · Fax: +43 2746 21044
www.linak.at

BELGIUM & LUXEMBOURG

LINAK Actuator-Systems NV/SA
Phone: +32 (0)9 230 01 09 · Fax: +32 (0)9 230 88 80
E-mail: linak@linak.be · www.linak.be

BRAZIL

LINAK do Brasil Comércio de Atuadores Ltda.
Phone: +55 (11) 6832-7070 · Fax: +55 (11) 6832-7060
E-mail: linakbrasil@ig.com.br · www.linak.com.br

CANADA

LINAK Canada Inc.
Phone: +1 905 821 7727 · Fax: +1 905 821 4281
E-mail: info@linak.ca · www.linak.ca

CZECH REPUBLIC

LINAK C&S S.R.O.
Phone: +420581741814 · Fax: +420581702452
E-mail: ponizil@linak.cz · www.linak.cz

DENMARK

LINAK DANMARK A/S
Phone: +45 86 80 36 11 · Fax: +45 86 82 90 51
E-mail: linak@linak-silkeborg.dk · www.linak.dk

FINLAND

LINAK OY
Phone: +358 10 841 8700 · Fax: +358 10 841 8729
E-mail: linak@linak.fi · www.linak.fi

FRANCE

LINAK FRANCE S.A.R.L.
Phone: +33 (0)2 4136 3434 · Fax: +33 (0)2 4136 3500
E-mail: linak@linak.fr · www.linak.fr

GERMANY

LINAK GmbH
Phone: +49 6043 9655 0 · Fax: +49 6043 9655 60
E-mail: info@linak.de · www.linak.de

INDIA

LINAK A/S India Liaison Office
Phone: +91 80 2299 6533 · Fax: +91 80 2224 3863
E-mail: info@linak.in · www.linak.in

IRELAND

LINAK UK Limited
Phone: +44(0)121 544 2211 · Fax: +44(0)121 544 2552
E-mail: stephen@linak.co.uk · www.linak.co.uk

ITALY

LINAK ITALIA S.r.l.
Phone: +39 02 48 46 33 66 · Fax: +39 02 48 46 82 52
E-mail: info@linak.it · www.linak.it

JAPAN

LINAK K.K.
Phone: +81 45 533 0802 · Fax: +81 45 533 0803
E-mail: linak@linak.jp · www.linak.jp

MALAYSIA

LINAK A/S Asian Representative Office
Phone: +60 4 210 6500 · Fax: +60 4 226 8901
E-mail: info@linak-asia.com · www.linak-asia.com

NETHERLANDS

LINAK Actuator-Systems B.V.
Phone: +31 76 5 42 44 40 · Fax: +31 76 5 42 61 10
E-mail: info@linak.nl · www.linak.nl

NEW ZEALAND

LINAK New Zealand Ltd.
Phone: +64 9580 2071 · Fax: +64 9580 2072
E-mail: nzsales@linak.com.au · www.linak.co.nz

NORWAY

LINAK Norge AS
Phone: +47 32 82 90 90 · Fax: +47 32 82 90 98
E-mail: info@linak.no · www.linak.no

POLAND

LINAK Polska
Phone: +48 (22) 500 28 74 · Fax: +48 (22) 500 28 75
E-mail: dkreh@linak.com · www.linak.pl

SPAIN

LINAK Actuadores S.L.
Phone: +34 93 588 27 77 · Fax: +34 93 588 27 85
E-mail: linakact@linak.es · www.linak.es

SWEDEN

LINAK Scandinavia AB
Phone: +46 8 732 20 00 · Fax: +46 8 732 20 50
E-mail: info@linak.se · www.linak.se

SWITZERLAND

LINAK AG
Phone: +41 43 388 31 88 · Fax: +41 43 388 31 87
E-mail: info@linak.ch · www.linak.ch

TAIWAN

LINAK A/S Taiwan Representative Office
Phone: +886 2 250 80296 · Fax: +886 2 2508 3604
E-mail: info@linak.com.tw · www.linak-asia.com

TURKEY

LINAK A/S Turkey Representative Office
Phone: +90 312 4726338-59 · Fax: +90 312 4726635
E-mail: vozen@linak.com.tr · www.linak.com.tr

UNITED KINGDOM

LINAK UK Limited
Phone: +44(0)121 544 2211 · Fax: +44(0)121 544 2552
E-mail: sales@linak.co.uk · www.linak.co.uk

DISTRIBUTORS

ARGENTINA

NOVOTEC ARGENTINA SRL
Phone: +5[4] (11) 4303-8900/89 · Fax: +5[4] (11) 4032-0184
E-mail: info@novotecargentina.com
www.novotecargentina.com

COLOMBIA

MEM Ltda
Phone: +5[7] (1) 334-7666 · Fax: +5[7] (1) 282-1684
E-mail: servicioalcliente@memltida.com.co
www.memltida.com.co

INDONESIA

PT. HIMALAYA EVEREST JAYA
Phone: +6 221 544 8956/65 · Fax: +6 221 619 4658/1925
E-mail: hejplastic-div@centrin.net.id

IRAN

Bod Inc.
Phone: +98 21 88527255 · Fax: +98 21 88514037
E-mail: mail@bod.ir · www.bod.ir

MEXICO

ILSA S.A. de C.V.
Phone: +52(55) 5388-3960 · Fax: +52(55) 5388-3966
E-mail: linak@ilsamexico.com · www.ilsamexico.com

RUSSIAN FEDERATION

000 FAM
Phone: +7 812 3319333 · Fax: +7 812 3271454
E-mail: purchase@fam-drive.ru · www.fam-drive.ru

SINGAPORE

SERVO DYNAMICS PTE. Ltd.
Phone: +65 6844 0288 · Fax: +65 6844 0070
E-mail: servodynamics@servo.com.sg · www.servo.com.sg

SOUTH AFRICA

Industrial Specialised Applications CC
Phone: +27 11 312 2292 or +27 11 2077600
Fax: +27 11 315 6999
www.stabilus.com

SOUTH KOREA

UNITEK ENG.
Phone: +82 2 567 0888 · Fax: +82 2 3453 1177
E-mail: unitekeng@unitekeng.co.kr · www.unitekeng.co.kr

UNITED ARAB EMIRATES

Mechatronics
Phone: +971 4 267 4311 · Fax: +971 4 267 4312
E-mail: mechtron@emirates.net.ae
www.mechatronics.ae

For contact details on other countries please visit
www.linak.com or contact:

LINAK INTERNATIONAL

Fax: +45 74 45 90 10
E-mail: info@linak.com · www.linak.com

The user is responsible for determining the suitability of LINAK products for a specific application.

LINAK A/S takes great care in providing accurate and up-to-date information on its products. However, due to continuing developments in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products. While LINAK uses its best efforts to fulfill orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.

All sales are subject to the Standard Terms of Sale and Delivery for LINAK A/S. For a copy hereof, please contact LINAK.



WE IMPROVE YOUR LIFE